


Code No	Function	Stage
A201	1 Pole	1
A201A	2 Pole	1
A202	3 Pole	2
A202A	4 Pole	2
A203	5 Pole	3
A203A	6 Pole	3
A204	7 Pole	4
A204A	8 Pole	4
A205	9 Pole	5
A205A	10 Pole	5
A206	11 Pole	6
A206A	12 Pole	6




Connecting Diagram

Stage 1 Stage 2

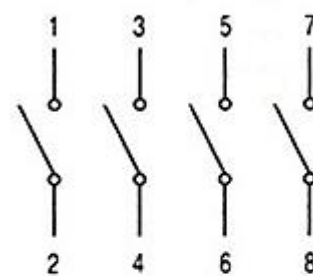

Stage 3 Stage 4

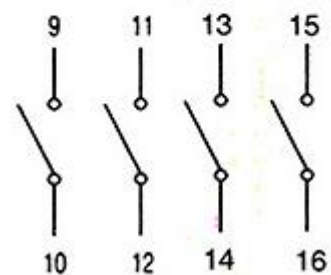

Escutch plate

