

Totalizers mechanic

Stroke and revolution counters

Display 5-digits, reset button

H 126, U 126



H 126 - Stroke counter



U 126 - Revolution counter

Features

- Stroke and revolution counters
- Adding
- Display 5-digits
- Manual reset by knurled knob

Technical data - mechanical design

Display	White numbers on black
Number of digits	5-digits
Digit height	4.5 mm
Zero setting	Reset by knurled knob
Drive shaft	Right or left, ø4 mm
Measuring range	99 999
Ambient temperature	0...+60 °C
Housing type	Surface mount housing with mounting plate
Housing colour	Grey
Dimensions W x H x L	40 x 29 x 27.5 mm
Dimensions mounting plate	60 x 29 mm
Mounting	Base plate, 4 mounting holes
Weight approx.	90 g
Materials	Housing: Hostaform POM, grey Base plate: steel zinc-coated

H 126

Function	Stroke counter
Count mode	Adding in a stroke direction to be indicated. 1 stroke = 1 count
Stroke	>38° to <60°
Stroke lever	To be positioned on shaft at will. Stroke lever relocates automatically to start position.
Stroke frequency	≤500 strokes/min

U 126

Function	Revolution counter
Count mode	Adding in a rotational direction to be indicated, subtracting in reverse direction. 1 rev. = 1 count
Operating speed	≤2000 rpm

Totalizers mechanic

Stroke and revolution counters

Display 5-digits, reset button

H 126, U 126

Part number

Stroke counter

H 126.0 0 A

Display / direction of stroke

G 5 digits 99 999 / I
H 5 digits 99 999 / II

Count mode / drive

- 01 1 stroke = 1 digit / drive shaft at right
- 02 1 stroke = 1 digit / drive shaft at left

Housing

A Surface mount housing, grey

Zero setting

- 1 Reset button at left
- 2 Reset button at right

Revolution counter

U 126.0 0 A

Display / direction of rotation

G 5 digits 99 999 / I
H 5 digits 99 999 / II

Count mode / drive

- 01 1 revolution = 1 digit / drive shaft at right
- 02 1 revolution = 1 digit / drive shaft at left

Housing


A Surface mount housing, grey

Zero setting


- 1 Reset button at left
- 2 Reset button at right

Direction of strokes and rotation

Drive on the right




Reset button left
Away from user
Sense of rotation or stroke direction I




Reset button left
Toward user
Sense of rotation or stroke direction II

Drive on the left





Reset button right
way from user
Sense of rotation or stroke direction I



Reset button right
Toward user
Sense of rotation or stroke direction II

Reset button always opposite of drive.

Dimensions

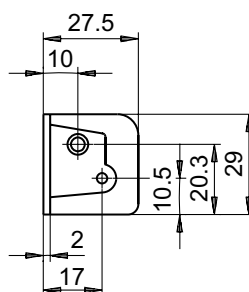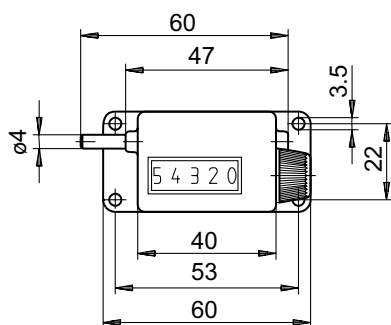

Stroke lever and stroke

